

# YAZOO

**BIG WHEEL  
22/24/26-INCH  
COMMERCIAL  
NON-COMPLIANCE  
MOWER**

P22B, P22W

S22B, S22W


P24B, P24W

S24B, S24W

P26B, P26W

S26B, S26W

ILLUSTRATED PARTS LIST

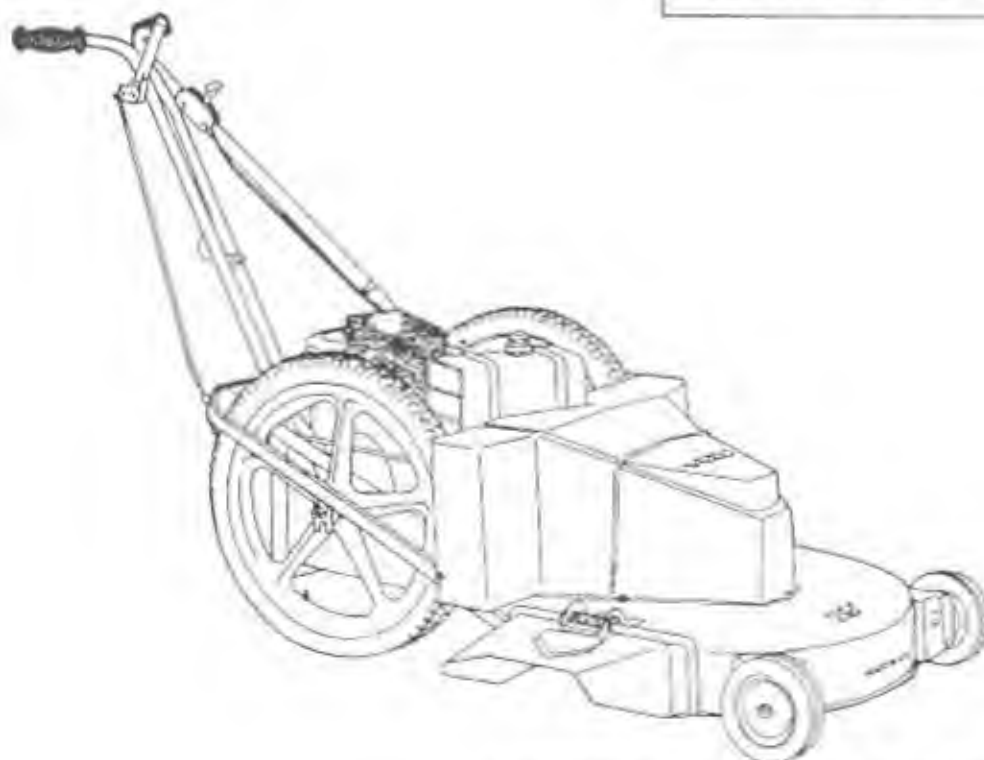

LITERATURE NUMBER 1301-083

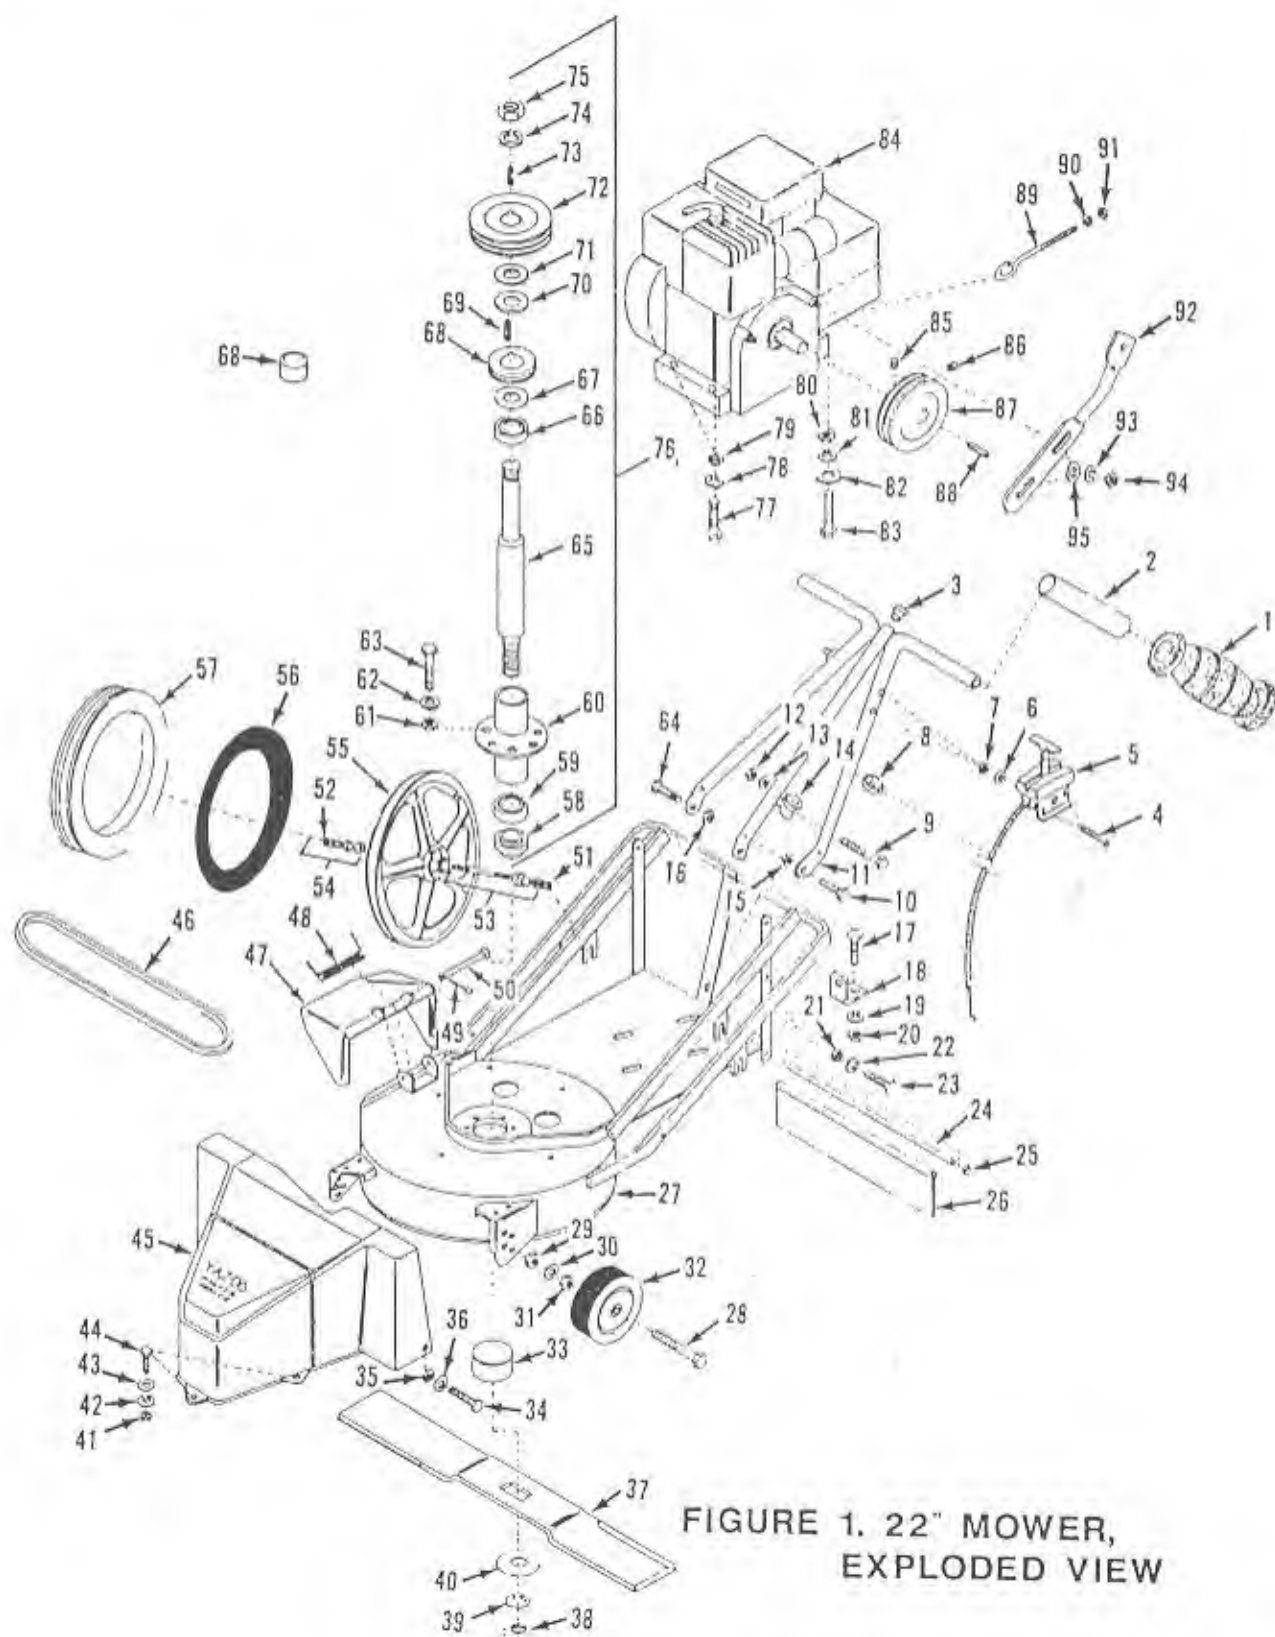


FIGURE 1. 22" MOWER,  
EXPLODED VIEW

# ILLUSTRATED PARTS LIST

KEY	PART NO.	DESCRIPTION	QTY.
1-1	703-016	GRIP, HANDLE SPONGE 7/8"	2
1-2	703-017	GRIP, PLASTIC BLACK 7/8"	2
1-3	303-004	CAP, TUBE 7/8"	1
1-4	208-007	BOLT, 3/16" X 1 1/4"	2
1-5	301-120	CABLE, THROTTLE	1
1-6	2301-001	WASHER, LOCK 3/16"	2
1-7	1401-001	NUT, 3/16"	2
1-8	309-020	CLIP, CABLE 7/8"	1
1-9	209-050	BOLT, 1/4" X 20" X 2"	1
1-10	209-114	BOLT, 5/16" X 1"	2
1-11	801-527P	ASSEMBLY, HANDLE (P-22)	1
1-11A	801-527S	ASSEMBLY, HANDLE (S-22)	1
1-12	1401-010	NUT, 1/4"	1
1-13	2301-003	WASHER, LOCK 1/4"	1
1-14	705-034	GUIDE, ROPE	1
1-15	1401-009	NUT, LOCK 1/4"	2
1-16	1401-009	NUT, LOCK 1/4"	1
1-17	209-114	BOLT, 5/16" X 1"	1
1-18	214-281	BRACKET, BELT TENSIONING	1
1-19	2301-004	WASHER, LOCK 5/16"	1
1-20	1401-020	NUT, 5/16"	1
1-21	1401-020	NUT, 5/16"	1
1-22	2301-004	WASHER, LOCK 5/16"	1
1-23	209-114	BOLT, 5/16" X 1"	1
1-24	1808-079	ROD, DRAG FLAP	1
1-25	303-021	CAP, DRAG FLAP ROD	2
1-26	609-001	FLAP, DRAG	1
1-27	605-422P	ASSEMBLY, FRAME (P-22B)	1
1-27A	605-422S	ASSEMBLY, FRAME (S-22B)	1
1-27B	605-423P	ASSEMBLY, FRAME (P-22W)	1
1-27C	605-423S	ASSEMBLY, FRAME (S-22W)	1
1-28	103-102	BOLT, 1/2" X 1 1/2"	2
1-29	1401-050	NUT, 1/2"	2
1-30	2301-008	WASHER, LOCK 1/2"	2
1-31	1401-050	NUT, 1/2"	2
1-32	2302-023	WHEEL, FRONT	2
1-33	1906-002	SHIELD, HUB	1
1-34	209-049	BOLT, 1/4" X 1"	2
1-35	1401-009	NUT, LOCK 1/4"	2
1-36	2301-020	WASHER, FLAT 1/4"	2
1-37	206-622	BLADE, CUTTING	1
1-38	1401-071	NUT, 5/8"	1
1-39	2301-010	WASHER, LOCK 5/8"	1
1-40	2301-096	WASHER, SPRING 5/8"	1
1-41	1401-010	NUT, 1/4"	2
1-42	2301-003	WASHER, LOCK 1/4"	2
1-43	2301-020	WASHER, FLAT 1/4"	2
1-44	209-021	BOLT, 1/4" X 3/4" USS	2
1-45	804-073	HOOD	1
1-46	205-512	V-BELT (P-22B, S-22B)	2
1-46A	205-041	V-BELT (P-22W)	2
1-46B	205-039	V-BELT (S-22W)	2
1-47	306-013	CHUTE, GUARD	1
1-48	1916-036	SPRING, CHUTE	1
1-49	1604-002	PIN, COTTER 3/32" X 1"	1

# ILLUSTRATED PARTS LIST

KEY	PART NO.	DESCRIPTION	QTY.
1-50	1604-043	PIN, CLEVIS	1
1-51	1401-180	NUT, REAR AXLE	2
1-52	1401-180	NUT, REAR AXLE	2
1-53	1105-013	KIT, REAR WHEEL	2
1-54	1105-013	KIT, REAR WHEEL	2
1-55	2302-100	WHEEL, REAR	2
1-56	2005-005	TUBE, INNER	2
1-57	2003-006	TIRE, PNEUMATIC	2
1-58	101-002	ADAPTER, B/W	1
1-59	204-060	BEARING, HUB 3/4"	1
1-60	806-017	HOUSING, HUB	1
1-61	1401-020	NUT, 5/16"	6
1-62	2301-004	WASHER, LOCK 5/16"	6
1-63	209-120	BOLT, 5/16" X 1 1/4" NC	6
1-64	209-108	BOLT, 5/16" X 3/4" NC	1
1-65	1904-034	SHAFT, HUB	1
1-66	204-060	BEARING, HUB	1
1-67	1913-220	SPACER	1
1-68	1608-010	PULLEY, FSP (PART OF HUB ASSY. 808-161 ONLY)	1
1-68A	1913-057	SPACER (PART OF HUB ASSY. 808-160 ONLY)	1
1-69	1102-011	KEY, 3/16" X 3/16"	1
1-70	2301-028	WASHER, 1 3/8" OD	1
1-71	2301-028	WASHER, 1 3/8" OD	1
1-72	1608-371	PULLEY, HUB	1
1-73	1102-001	KEY, 3/16" X 3/16"	1
1-74	2301-010	WASHER, LOCK 5/8"	1
1-75	1401-070	NUT, 5/8"	1
1-76	808-160	ASSEMBLY, HUB (P-22B, P-22W)	1
1-76A	808-161	ASSEMBLY, HUB (S-22B, S-22W)	1
1-77	209-135	BOLT, 5/16" X 1 3/4"	3
1-78	2301-004	WASHER, LOCK 5/16"	3
1-79	1401-020	NUT, 5/16"	3
1-80	1401-020	NUT, 5/16"	1
1-81	2301-004	WASHER, LOCK 5/16"	1
1-82	2301-021	WASHER, FLAT 5/16"	1
1-83	209-138	BOLT, 5/16" X 2"	1
1-84	E244	ENGINE (P-22B, S-22B)	1
1-84A	E236	ENGINE (P-22W, S-22W)	1
1-85	1901-009	SCREW, 5/16" X 5/16"	1
1-86	1901-009	SCREW, 5/16" X 5/16"	1
1-87	1608-370	PULLEY, ENGINE (P-22B, S-22B, S-22W)	1
1-87A	1608-083	PULLEY, ENGINE (P-22W)	1
1-88	1102-001	KEY, 3/16" X 3/16"	1
1-89	212-014	BOLT, EYE 1/4" X 4"	1
1-90	2301-003	WASHER, LOCK 1/4"	1
1-91	1401-010	NUT, 1/4"	1
1-92	213-045	BRACE, ENGINE SUPPORT (P-22B, S-22B)	1
1-93	2301-003	WASHER, LOCK 1/4"	2
1-94	1401-010	NUT, 1/4"	2
1-95	2301-020	WASHER, FLAT 1/4"	2

**ILLUSTRATED PARTS LIST**

KEY	PART NO.	DESCRIPTION	QTY.
2-51	1401-180	NUT, REAR AXLE	2
2-52	1401-180	NUT, REAR AXLE	2
2-53	1105-013	KIT, REAR WHEEL	2
2-54	1105-013	KIT, REAR WHEEL	2
2-55	2302-099	WHEEL, REAR	2
2-56	2005-009	TUBE, INNER	2
2-57	2003-010	TIRE, PNEUMATIC	2
2-58	101-002	ADAPTER, B/W	1
2-59	204-060	BEARING, HUB 3/4"	1
2-60	806-017	HOUSING, HUB	1
2-61	1401-020	NUT, 5/16"	6
2-62	2301-004	WASHER, LOCK 5/16"	6
2-63	209-120	BOLT, 5/16" X 1 1/4" NC	6
2-64	209-108	BOLT, 5/16" X 3/4" NC	1
2-65	1904-034	SHAFT, HUB	1
2-66	204-060	BEARING, HUB	1
2-67	1913-220	SPACER	1
2-68	1608-010	PULLEY, FSP (PART OF HUB ASSY, 808-161 ONLY)	1
2-68A	1913-057	SPACER (PART OF HUB ASSY, 808-160 ONLY)	1
2-69	1102-011	KEY, 3/16" X 3/16"	1
2-70	2301-028	WASHER, 1 3/8" OD	1
2-71	2301-028	WASHER, 1 3/8" OD	1
2-72	1608-371	PULLEY, HUB	1
2-73	1102-001	KEY, 3/16" X 3/16"	1
2-74	2301-010	WASHER, LOCK 5/8"	1
2-75	1401-070	NUT, 5/8"	1
2-76	808-160	ASSEMBLY, HUB (P-24B, P-24W)	1
2-76A	808-161	ASSEMBLY, HUB (S-24B, S-24W)	1
2-77	209-135	BOLT, 5/16" X 1 3/4"	3
2-78	2301-004	WASHER, LOCK 5/16"	3
2-79	1401-020	NUT, 5/16"	3
2-80	1401-020	NUT, 5/16"	1
2-81	2301-004	WASHER, LOCK 5/16"	1
2-82	2301-021	WASHER, FLAT 5/16"	1
2-83	209-138	BOLT, 5/16" X 2"	1
2-84	E244	ENGINE (P-24B, S-24B)	1
2-84A	E236	ENGINE (P-24W, S-24W)	1
2-85	1901-009	SCREW, 5/16" X 5/16"	1
2-86	1901-009	SCREW, 5/16" X 5/16"	1
2-87	1608-370	PULLEY, ENGINE (P-24B, S-24B, S-24W)	1
2-87A	1608-083	PULLEY, ENGINE (P-24W)	1
2-88	1102-001	KEY, 3/16" X 3/16"	1
2-89	212-014	BOLT, EYE 1/4" X 4"	1
2-90	2301-003	WASHER, LOCK 1/4"	1
2-91	1401-010	NUT, 1/4"	1
2-92	213-044	BRACE, ENGINE SUPPORT (P-24B, S-24B)	1
2-93	2301-003	WASHER, LOCK 1/4"	2
2-94	1401-010	NUT, 1/4"	2
2-95	2301-020	WASHER, FLAT 1/4"	2

# ILLUSTRATED PARTS LIST

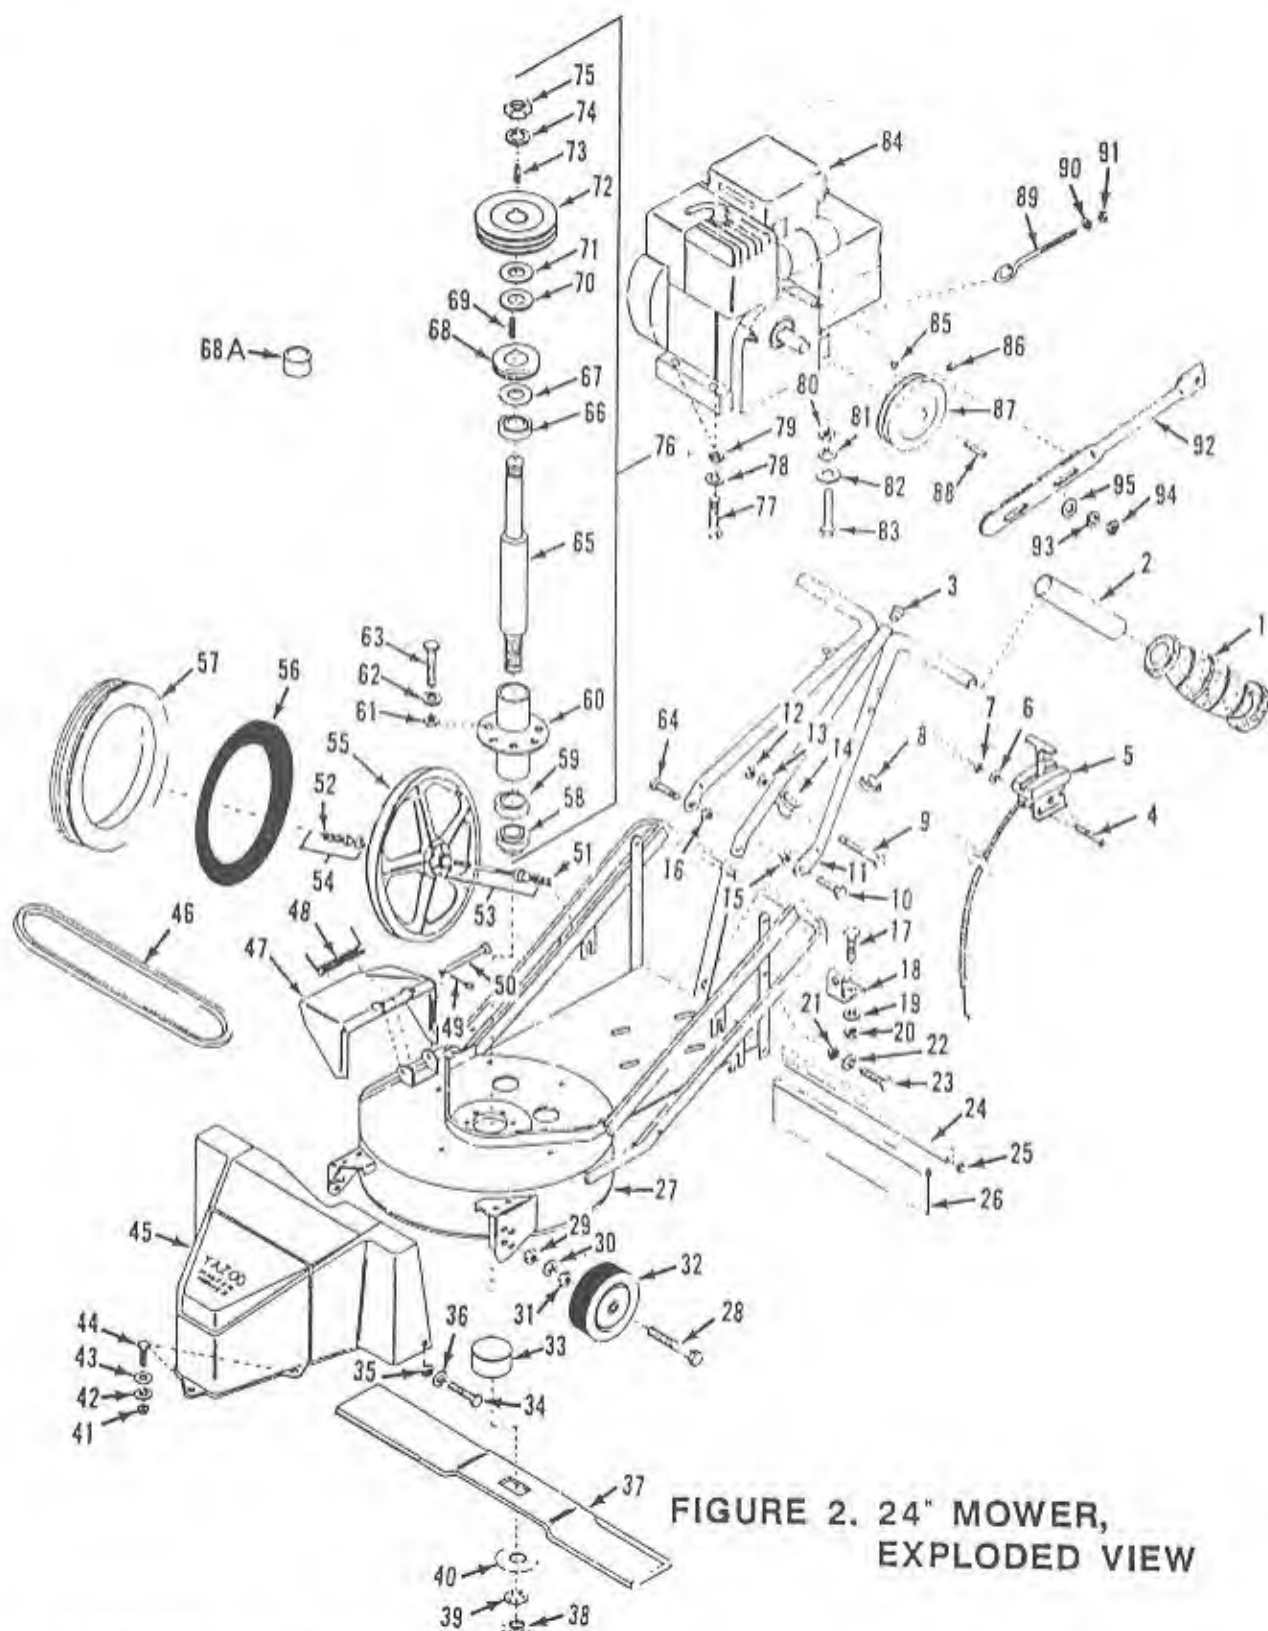


FIGURE 2. 24" MOWER,  
EXPLODED VIEW



# ILLUSTRATED PARTS LIST

KEY	PART NO.	DESCRIPTION	QTY.
2-1	703-018	GRIP, HANDLE SPONGE 7/8"	2
2-2	703-017	GRIP, PLASTIC BLACK 7/8"	2
2-3	303-004	CAP, TUBE 7/8"	1
2-4	208-007	BOLT, 3/16" X 1 1/4"	2
2-5	301-120	CABLE, THROTTLE (S-24B ONLY)	1
2-6	2301-001	WASHER, LOCK 3/16"	2
2-7	1401-001	NUT, 3/16"	2
2-8	309-020	CLIP, CABLE 7/8" (S-24B ONLY)	1
2-9	209-050	BOLT, 1/4" X 20" X 2"	1
2-10	209-114	BOLT, 5/16" X 1"	2
2-11	801-528P	ASSEMBLY, HANDLE (P-24B, P-24W)	1
2-11A	801-528S	ASSEMBLY, HANDLE (S-24B, S-24W)	1
2-12	1401-010	NUT, 1/4"	1
2-13	2301-003	WASHER, LOCK 1/4"	1
2-14	705-034	GUIDE, ROPE	1
2-15	1401-009	NUT, LOCK 1/4"	2
2-16	1401-009	NUT, LOCK 1/4"	1
2-17	209-114	BOLT, 5/16" X 1"	1
2-18	214-281	BRACKET, BELT TENSIONING	1
2-19	2301-004	WASHER, LOCK 5/16"	1
2-20	1401-020	NUT, 5/16"	1
2-21	1401-020	NUT, 5/16"	1
2-22	2301-004	WASHER, LOCK 5/16"	1
2-23	209-114	BOLT, 5/16" X 1"	1
2-24	1808-078	ROD, DRAG FLAP	1
2-25	303-021	CAP, DRAG FLAP ROD	2
2-26	609-002	FLAP, DRAG	1
2-27	605-424P	ASSEMBLY, FRAME (P-24B)	1
2-27A	605-424S	ASSEMBLY, FRAME (S-24B)	1
2-27B	605-425P	ASSEMBLY, FRAME (P-24W)	1
2-27C	605-425S	ASSEMBLY, FRAME (S-24W)	1
2-28	103-102	BOLT, 1/2" X 1 1/2"	2
2-29	1401-050	NUT, 1/2"	2
2-30	2301-008	WASHER, LOCK 1/2"	2
2-31	1401-050	NUT, 1/2"	2
2-32	2302-023	WHEEL, FRONT	2
2-33	1906-05021	SHIELD, HUB	1
2-34	209-049	BOLT, 1/4" X 1"	2
2-35	1401-009	NUT, LOCK 1/4"	2
2-36	2301-020	WASHER, FLAT 1/4"	2
2-37	206-624	BLADE, CUTTING	1
2-38	1401-071	NUT, 5/8"	1
2-39	2301-010	WASHER, LOCK 5/8"	1
2-40	2301-096	WASHER, SPRING 5/8"	1
2-41	1401-010	NUT, 1/4"	2
2-42	2301-003	WASHER, LOCK 1/4"	2
2-43	2301-020	WASHER, FLAT 1/4"	2
2-44	209-021	BOLT, 1/4" X 3/4" USS	2
2-45	804-072	HOOD	1
2-46	205-042	V-BELT	2
2-47	306-012	CHUTE, GUARD	1
2-48	1916-036	SPRING, CHUTE	1
2-49	1604-002	PIN, COTTER 3/32" X 1"	1
2-50	1604-043	PIN, CLEVIS	1

# ILLUSTRATED PARTS LIST

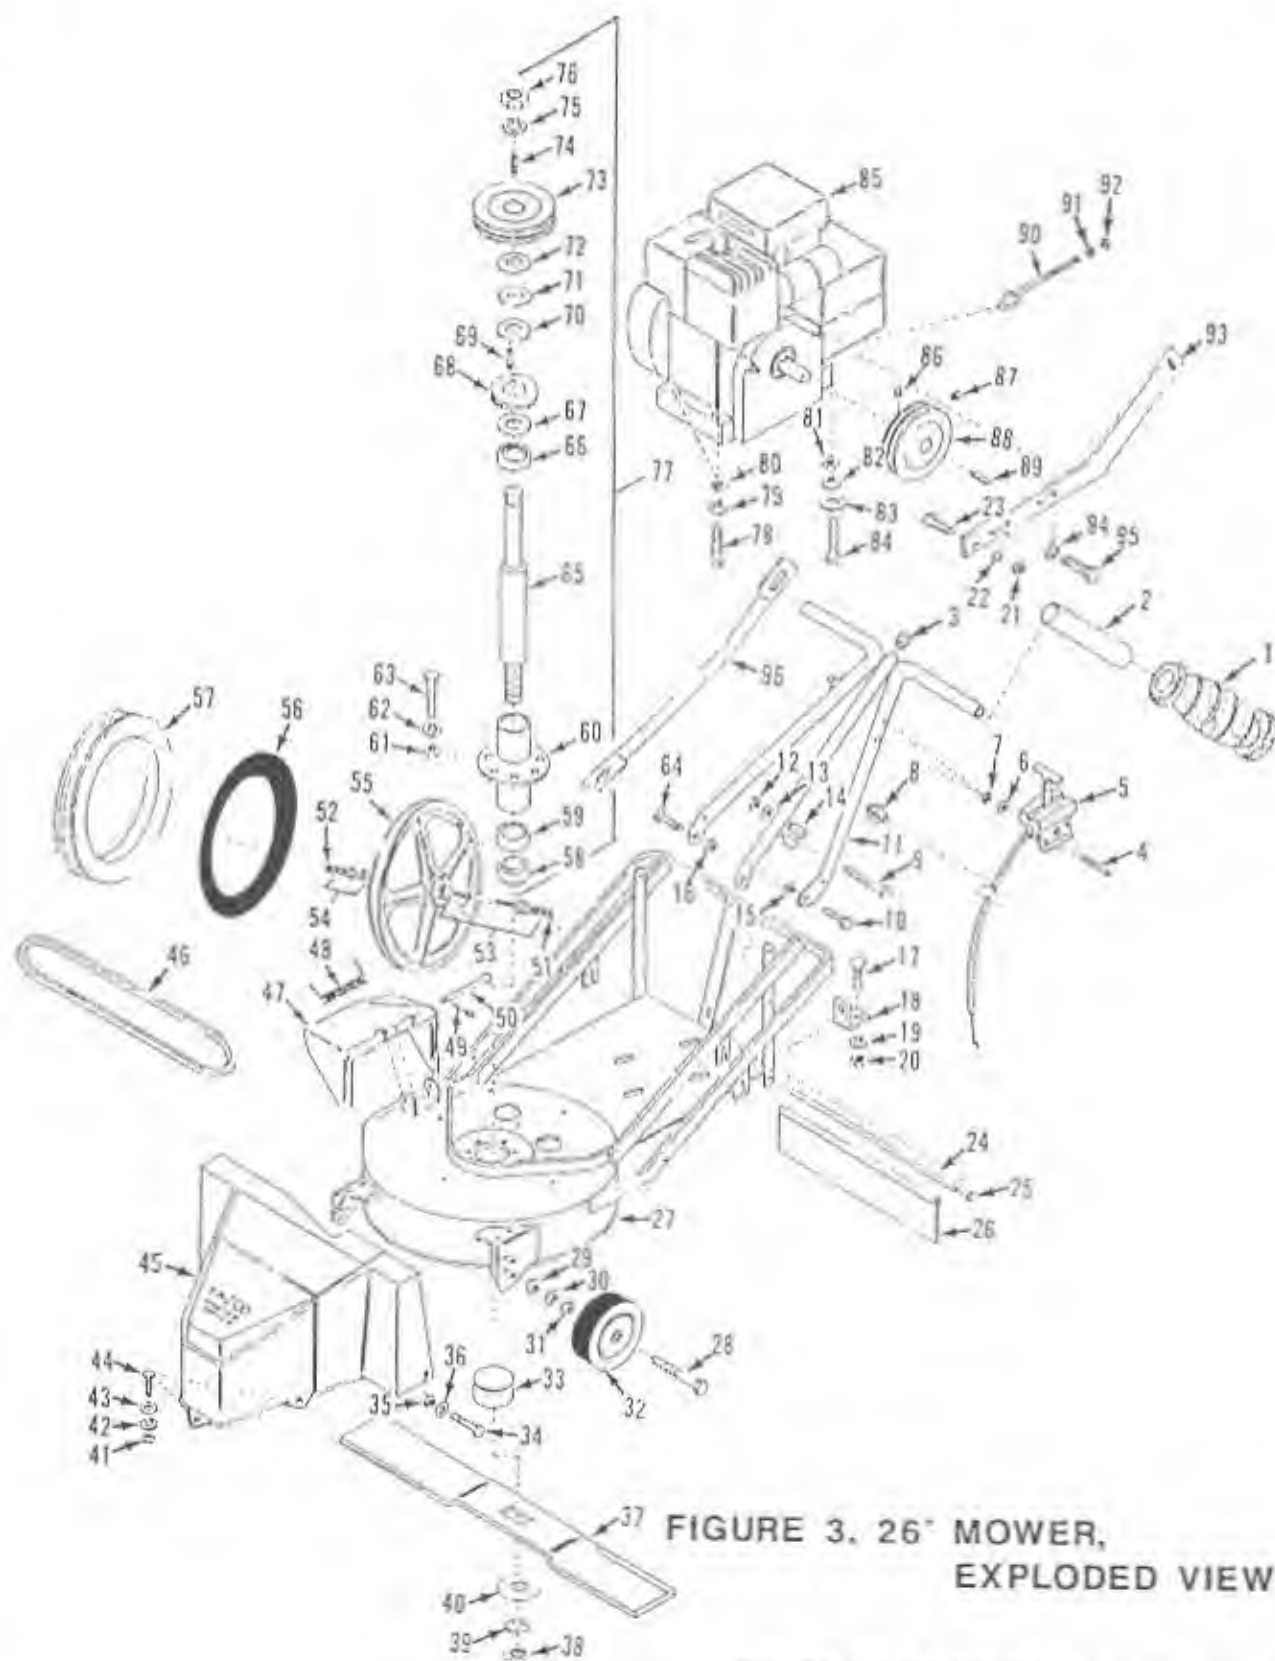


FIGURE 3. 26" MOWER,  
EXPLODED VIEW



# ILLUSTRATED PARTS LIST

KEY	PART NO.	DESCRIPTION	QTY.
3-1	703-016	GRIP, HANDLE SPONGE 7/8"	2
3-2	703-017	GRIP, PLASTIC BLACK 7/8"	2
3-3	303-004	CAP, TUBE 7/8"	1
3-4	208-007	BOLT, 3/16" X 1 1/4"	2
3-5	301-119	CABLE, THROTTLE (S-26B ONLY)	1
3-6	2301-001	WASHER, LOCK 3/16"	2
3-7	1401-001	NUT, 3/16"	2
3-8	309-020	CLIP, CABLE 7/8" (S-26B ONLY)	1
3-9	209-050	BOLT, 1/4" X 20" X 2"	1
3-10	209-114	BOLT, 5/16" X 1"	2
3-11	801-525	ASSEMBLY, HANDLE (S-26B, S-26W)	1
3-12	1401-010	NUT, 1/4"	1
3-13	2301-003	WASHER, LOCK 1/4"	1
3-14	705-034	GUIDE, ROPE	1
3-15	1401-009	NUT, LOCK 1/4"	2
3-16	1401-009	NUT, LOCK 1/4"	1
3-17	209-114	BOLT, 5/16" X 1"	1
3-18	214-281	BRACKET, BELT TENSIONING	1
3-19	2301-004	WASHER, LOCK 5/16"	1
3-20	1401-020	NUT, 5/16"	1
3-21	1401-020	NUT, 5/16"	1
3-22	2301-004	WASHER, LOCK 5/16"	1
3-23	209-114	BOLT, 5/16" X 1"	1
3-24	1808-100	ROD, DRAG FLAP	1
3-25	303-021	CAP, DRAG FLAP ROD	2
3-26	609-003	FLAP, DRAG	1
3-27	605-426	ASSEMBLY, FRAME (S-26B)	1
3-27A	605-427	ASSEMBLY, FRAME (S-26W)	1
3-28	103-102	BOLT, 1/2" X 1 1/2"	2
3-29	1401-050	NUT, 1/2"	2
3-30	2301-008	WASHER, LOCK 1/2"	2
3-31	1401-050	NUT, 1/2"	2
3-32	2302-023	WHEEL, FRONT	2
3-33	1906-008021	SHIELD, HUB	1
3-34	209-049	BOLT, 1/4" X 1"	2
3-35	1401-009	NUT, LOCK 1/4"	2
3-36	2301-020	WASHER, FLAT 1/4"	2
3-37	206-626	BLADE, CUTTING	1
3-38	1401-071	NUT, 5/8"	1
3-39	2301-010	WASHER, LOCK 5/8"	1
3-40	2301-096	WASHER, SPRING 5/8"	1
3-41	1401-010	NUT, 1/4"	2
3-42	2301-003	WASHER, LOCK 1/4"	2
3-43	2301-020	WASHER, FLAT 1/4"	2
3-44	209-021	BOLT, 1/4" X 3/4" USS	2
3-45	804-070	HOOD	1
3-46	205-147	V-BELT (S-26B)	2
3-46A	205-045	V-BELT (S-26W)	2
3-47	306-012	CHUTE, GUARD	1
3-48	1916-036	SPRING, CHUTE	1
3-49	1604-002	PIN, COTTER 3/32" X 1"	1
3-50	1604-043	PIN, CLEVIS	1
3-51	1401-180	NUT, REAR AXLE	2
3-52	1401-180	NUT, REAR AXLE	2
3-53	1105-013	KIT, REAR WHEEL	2

# ILLUSTRATED PARTS LISTING

KEY	PART NO.	DESCRIPTION	QTY.
3-54	1105-013	KIT, REAR WHEEL	2
3-55	2302-099	WHEEL, REAR	2
3-56	2005-009	TUBE, INNER	2
3-57	2003-010	TIRE, PNEUMATIC	2
3-58	101-002	ADAPTER, B/W	1
3-59	204-060	BEARING, HUB 3/4"	1
3-60	806-017	HOUSING, HUB	1
3-61	1401-020	NUT, 5/16"	6
3-62	2301-004	WASHER, LOCK 5/16"	6
3-63	209-120	BOLT, 5/16" X 1 1/4" NC	6
3-64	209-108	BOLT, 5/16" X 3/4" NC	1
3-65	1904-034	SHAFT, HUB	1
3-66	204-060	BEARING, HUB	1
3-67	1913-220	SPACER	1
3-68	1608-010	PULLEY, FSP	1
3-69	1102-011	KEY, 3/16" X 3/16"	1
3-70	2301-028	WASHER, 1 3/8" OD	1
3-71	2301-028	WASHER, 1 3/8" OD	1
3-72	2301-028	WASHER, 1 3/8" OD	1
3-73	1608-008	PULLEY, HUB	1
3-74	1102-001	KEY, 3/16" X 3/16"	1
3-75	2301-010	WASHER, LOCK 5/8"	1
3-76	1401-070	NUT, 5/8"	1
3-77	808-019	ASSEMBLY, HUB	1
3-78	209-138	BOLT, 5/16" X 1 3/4"	3
3-79	2301-004	WASHER, LOCK 5/16"	3
3-80	1401-020	NUT, 5/16"	3
3-81	1401-020	NUT, 5/16"	1
3-82	2301-004	WASHER, LOCK 5/16"	1
3-83	2301-021	WASHER, FLAT 5/16"	1
3-84	209-150	BOLT, 5/16" X 2"	1
3-85	E215	ENGINE (S-26B)	1
3-85A	E235	ENGINE (S-26W)	1
3-86	1901-009	SCREW, 5/16" X 5/16"	1
3-87	1901-009	SCREW, 5/16" X 5/16"	1
3-88	1608-331	PULLEY, ENGINE	1
3-89	1102-002	KEY, 3/16" X 3/16"	1
3-90	212-014	BOLT, EYE 1/4" X 4"	1
3-91	2301-003	WASHER, LOCK 1/4"	1
3-92	1401-010	NUT, 1/4"	1
3-93	213-037	BRACE, ENGINE SUPPORT (S-26B)	1
3-94	2301-006	WASHER, LOCK 3/8"	2
3-95	209-314	BOLT, 3/8" X 1" NC	2
3-96	213-043	BRACE, ENGINE SUPPORT (S-26B)	1

THIS DOCUMENT CONTAINS NEITHER RECOMMENDATIONS NOR  
CONCLUSIONS OF THE NATIONAL BUREAU OF STANDARDS  
AND IS NOT INTENDED TO BE USED IN LEGAL PROCEEDINGS



40

# ILLUSTRATED PARTS LISTING


KEY	PART NO.	DESCRIPTION	QTY.
4-1	1201-015	LEVER, FSP ENGAGING	1
4-2	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-3	215-026	BUSHING, NYLON 5/8" X 1/2"	1
4-4	1808-089	ROD, ENGAGING (S-22)	1
4-4A	1808-141	ROD, ENGAGING (S-24, S-26)	1
4-5	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-6	1808-150	ROD, FRICTION TENSION	1
4-7	1401-020	NUT, 5/16"	1
4-8	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-9	1604-013	PIN, RIVET 5/16" X 1 1/4"	1
4-10	2501-027	YOKE, ADJUSTABLE 5/16"	1
4-11	1604-013	PIN, RIVET 5/16" X 1 1/4"	1
4-12	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-13	1604-013	PIN, RIVET 5/16" X 1 1/4"	1
4-14	2501-027	YOKE, ADJUSTABLE 5/16"	1
4-15	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-16	1808-147 149	ROD, FRICTION TENSION	1
4-16A	1808-149 147	ROD, FRICTION TENSION	1
4-17	1401-020	NUT, 5/16"	1
4-18	1604-041	PIN, COTTER 3/32" X 5/8"	1
4-19	1604-013	PIN, RIVET 5/16" X 1 1/4"	1
4-20	2501-027	YOKE, ADJUSTABLE 5/16"	1
4-21	1604-014	PIN, ROLL 3/16" X 1 1/8"	1
4-22	1913-095	SPACER, 1 1/4" OD X 41/64" ID	1
4-23	405-006	DRIVER, FRICTION SPLINE (S-22)	1
4-23A	405-004	DRIVER, FRICTION SPLINE (S-24, S-26)	1
4-24	1803-007	FRICTION, RATCHET RH	1
4-25	1604-014	PIN, ROLL 3/16" X 1 1/8"	1
4-26	102-003	ARM, FRICTION	1
4-27	1916-013	SPRING, FRICTION RATCHET	1
4-28	1604-007	PIN, FRICTION SPLINE DRIVER 1/4"	1
4-29	204-020	HUB, BEARING	1
4-30	311-002	COLLAR, SET 5/8"	1
4-31	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-32	1917-014	SPROCKET, 36-TOOTH	1
4-33	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-34	1904-058	SHAFT, FSP (S-22)	1
4-34A	1904-061	SHAFT, FSP (S-24)	1
4-34B	1904-060	SHAFT, FSP (S-26)	1
4-35	1604-014	PIN, ROLL 3/16" X 1 1/8"	1
4-36	1913-095	SPACER, 1 1/4" OD X 41/64" ID	1
4-37	405-006	DRIVER, FRICTION SPLINE (S-22)	1
4-37A	405-004	DRIVER, FRICTION SPLINE (S-24, S-26)	1
4-38	1803-008	FRICTION, RATCHET LH	1
4-39	1604-014	PIN, ROLL 3/16" X 1 1/8"	1
4-40	102-003	ARM, FRICTION	1
4-41	1916-013	SPRING, FRICTION RATCHET	1
4-42	1604-007	PIN, FRICTION SPLINE DRIVER 1/4"	1
4-43	204-020	HUB, BEARING	1
4-44	311-002	COLLAR, SET 5/8"	1
4-45	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-46	1401-020	NUT, 5/16"	2
4-47	2301-021	WASHER, FLAT 5/16"	2
4-48	212-025	BOLT, SHOULDER 7/16" X 3/8" X 1 1/4"	2
4-49	2301-095	WASHER, FLAT 7/16" X 1 1/2"	2

S 22  
S24 S26

**ILLUSTRATED PARTS LISTING**

KEY	PART NO.	DESCRIPTION	QTY.
4-50	305-025	CHAIN, FSP	1
4-51	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-52	1917-012	SPROCKET, FRICTION UNIT 5/8" BORE	1
4-53	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-54	1618-046	PULLEY, FRICTION	1
4-55	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-56	204-045	BEARING, FRICTION	1
4-57	1401-020	NUT, 5/16"	2
4-58	2301-004	WASHER, LOCK 5/16"	2
4-59	209-114	BOLT, CAP PLATED 5/16" X 1"	2
4-60	2301-021	WASHER, FLAT 5/16"	2
4-61	806-062	HOUSING, FRICTION HUB	1
4-62	1401-020	NUT, 5/16"	1
4-63	2301-004	WASHER, LOCK 5/16"	1
4-64	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-65	2301-021	WASHER, FLAT 5/16"	1
4-66	1401-020	NUT, 5/16"	1
4-67	2301-004	WASHER, LOCK 5/16"	1
4-68	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-69	2301-021	WASHER, FLAT 5/16"	1
4-70	1401-020	NUT, 5/16"	1
4-71	2301-004	WASHER, LOCK 5/16"	1
4-72	209-114	BOLT, CAP PLATED 5/16" X 1"	1
4-73	2301-021	WASHER, FLAT 5/16"	1
4-74	214-065	BRACKET, FSP (S-22)	1
4-74A	214-064	BRACKET, FSP (S-24)	1
4-74B	214-063	BRACKET, FSP (S-26)	1
4-75	205-425	BELT, FSP (S-22), (S-24)	1
4-75A	205-428	BELT, FSP (S-26)	1
4-76	1604-041	PIN, COTTER 3/32" X 5/8"	1

# 1105-057 Swivel Wheel Kit

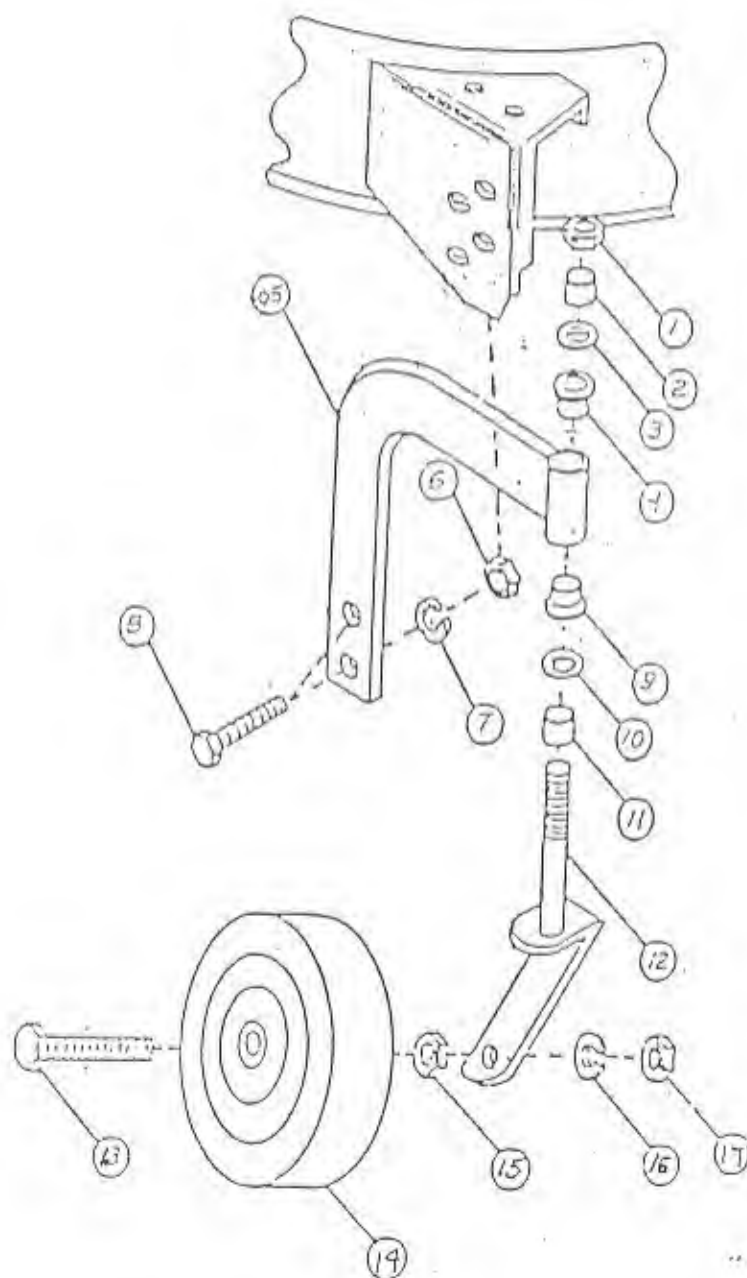



## PARTS LIST 1105-057 KIT

PART DESCRIPTION, SWIVEL WHEEL KIT.

## INSTALLATION INSTRUCTIONS,

- STEP (1) REMOVE FRONT WHEELS FROM MOWER.
- STEP (2) USING THE ASSEMBLY DRAWING AS A GUIDE, MOUNT THE SWIVEL WHEEL ARM TO THE MOWER FRAME. ITEMS NO. (5), (6), (7), (8) ARE NEEDED.
- STEP (3) ASSEMBLE THE WHEEL AND YOKE TOGETHER. ITEMS NO. (12), (13), (14), (15), (16), (17) ARE NEEDED.
- STEP (4) MOUNT YOKE AND WHEEL ASSEMBLY TO SWIVEL WHEEL ARM. THE ASSEMBLY DRAWING PROVIDES A BASIC ASSEMBLY SET UP. THE SPACERS CAN BE RELOCATED WITHIN THIS ASSEMBLY TO ADJUST WHEEL HEIGHT FOR THE CUT DESIRED BY THE OPERATOR. ITEMS NO. (1), (2), (3), (4), (9), (10), (11) ARE NEEDED.

NOTE: A NYLOK NUT HAS BEEN PROVIDED TO SECURE THE WHEEL AND YOKE ASSEMBLY AT A GOOD PIVOT POINT. THE NUT SHOULD BE TIGHTENED TILL THE ASSEMBLY IS TIGHT BUT WILL STILL PIVOT PROPERLY.

PARTS LIST  
1105-057 SWIVEL WHEEL KIT

IF. #	PART NUMBER	PART DESCRIPTION	QUANTITY
01	1401-228	NUT, 1/2 IN. NYLOK NC.	2
02	1913-277	SPACER, ADJUSTMENT 1/2	2
03	2301-334	WASHER, FLAT 1/2 IN	2
04	0215-157	BUSHING, NYLON	2
05	0214-474	ARM, SWIVEL WHEEL ASSY	2
06	1401-052	NUT, 1/2 IN FULL NC.	4
07	2301-008	WASHER, 1/2 LOCK	4
08	0209-497	BOLT, 1/2 IN X 1 1/4 IN NC	4
09	0215-157	BUSHING, NYLON	2
10	2301-334	WASHER, FLAT 1/2 IN	2
11	1913-277	SPACER, ADJUSTMENT 1/2	2
12A	2501-052	YOKE ASSEMBLY L/HAND	1
12B	2501-053	YOKE ASSEMBLY R/HAND	1
13	0103-102	AXLE, 1/2 IN X 2 1/2 IN NF	2
14	2302-023	WHEEL ASSEMBLY FRONT	2
15	1401-051	NUT, 1/2 IN JAN NF.	2
16	2301-008	WASHER 1/2 IN LOCK	2
17	1401-051	NUT, 1/2 IN JAN NF.	2

Box 911-052